
Side-opening retractable insect screen

TECH'N'ROLL


INSTALLATION INSTRUCTIONS

1

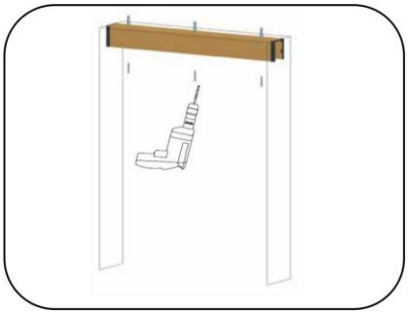


Insert the end caps into the top profile. Fix the guide at the top of the opening using the wall plugs and screws supplied.

2

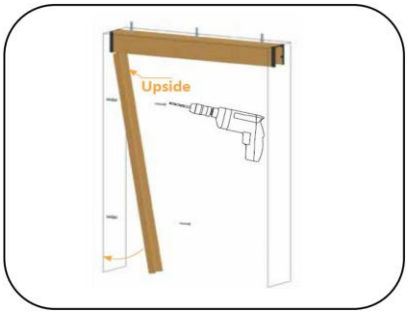

Position the magnetic side profile on the opening side, with the UPSIDE label inside the top guide. Drill and fix it using the wall plugs and screws supplied.

3

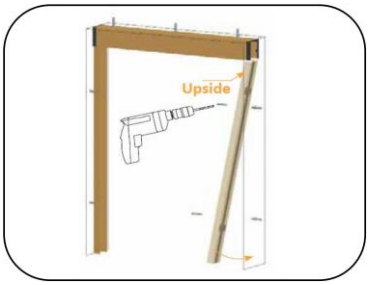

Position the side profile with the fixing clip on the other side (the side fixed to the mesh), with the UPSIDE label inside the top guide. Drill and fix it using the wall plugs and screws supplied.

4



Peel the backing off the adhesive on the bottom guide and fix it to the floor, making sure it is aligned with the side profiles.

5



Place the screen with its UPSIDE label inside the top guide. Rest the assembly on the bottom guide.

6



Engage the screen fixing clips with the clips on the side profile. If they do not engage, slightly loosen the clip screws on the fixed profile and adjust upwards or downwards as required.

FOR THE DOUBLE-LEAF VERSION: Both sides have clips to hold the screen. Fix the centre stop in the top guide using screws and wall plugs.