
Side-opening retractable insect screen

TECH'N'ROLL


INSTALLATION INSTRUCTIONS - DETAILED

1

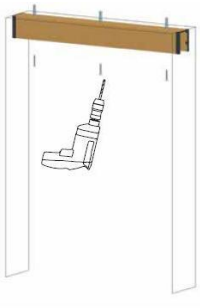


Insert the end caps into the top profile. Position the guide at the top of the opening. Drill and fix it using the wall plugs and screws supplied.

2

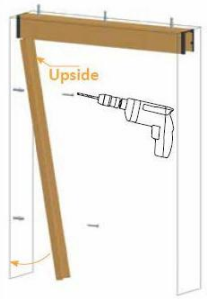

Position the magnetic side profile on the opening side, with the UPSIDE label inside the top guide. Drill and fix it using the wall plugs and screws supplied.

3

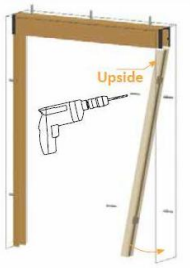


Position the side profile with the fixing clip on the other side (the fixed side), with the UPSIDE label inside the top guide. Drill and fix it using the wall plugs and screws supplied.

4




Peel the backing off the adhesive on the bottom guide and fix it to the floor, making sure it is aligned with the side profiles.

5

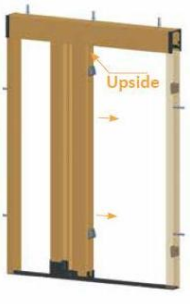

Place the screen with its UPSIDE label inside the top guide. Rest the assembly on the bottom guide.

6

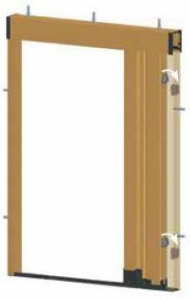

Engage the screen fixing clips with those on the side profile. If they do not engage, loosen the clip screws on the fixed profile and move it as required.

NOTE: For the double-leaf version, both side profiles have fixing clips. Fix the centre stop in the middle of the top guide using screws and wall plugs.