
Pleated insect screen

TECH.22

INSTALLATION INSTRUCTIONS

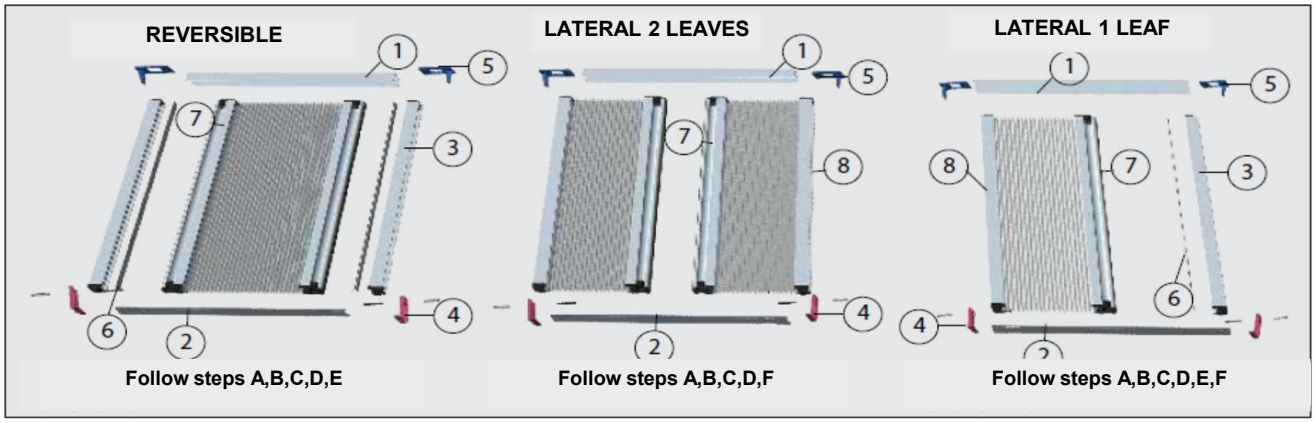


A



Prepare the top and bottom guides: press the upper sliding corner brackets into the top guide and the lower ones into the bottom guide.

B

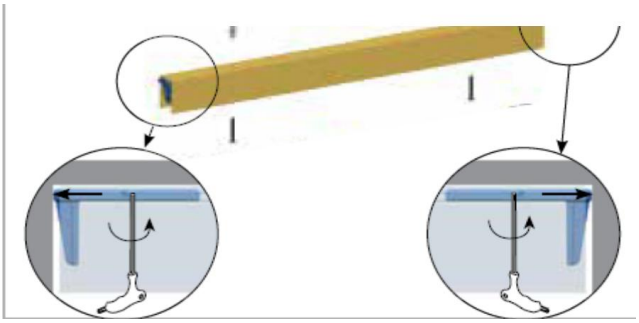


Screw the top guide to the ceiling. Once fixed, slide the corner brackets fully to the left and right respectively, and secure them with a 2.5 mm Allen key.

C



Fix the bottom guide to the floor with the double-sided tape, keeping the drainage openings on the outside. Slide the corner brackets towards the wall, secure them with a 2.5 mm Allen key and screw them to the wall.


D

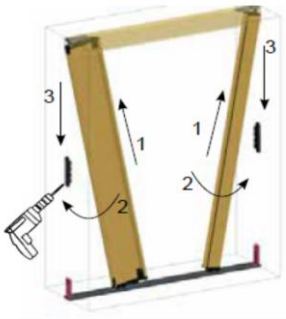


Fix the wall clips in line with the top and bottom guides (3 on each side). Insert the screen assembly with the mesh diagonally upwards (1), clip it to the wall (2), then push it down (3). Repeat with the end profile on the opposite side.


CORD ADJUSTMENT


E Remove the magnetic strip from the wall profile. Using a 2.5 mm Allen key, loosen the sliders inside the profile and move them until the cords are tensioned. Refit the magnetic strip in its original orientation.

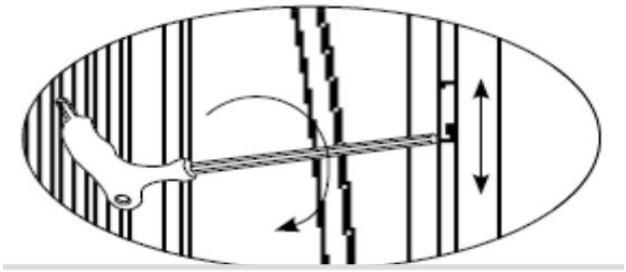

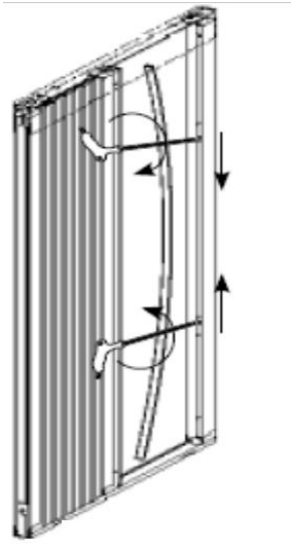

F Only if necessary, adjust the tension of each cord individually by loosening the screws at the mesh exit and moving them up or down.

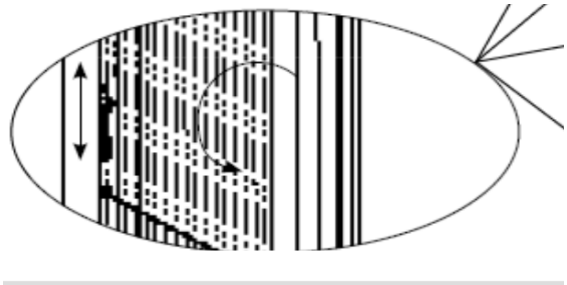

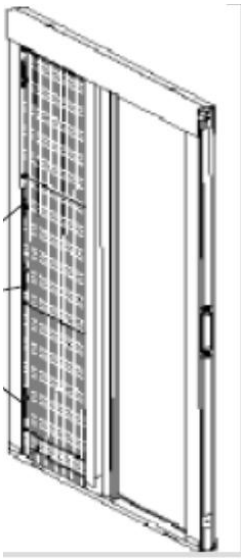

IMPORTANT NOTICE

Cord tension must be kept to the minimum needed for the screen to operate normally and smoothly. Excess tension will make the screen stiff to operate and may shorten its service life through excessive friction.