
Sliding insect screen

CARIBE


ASSEMBLY AND INSTALLATION INSTRUCTIONS

1

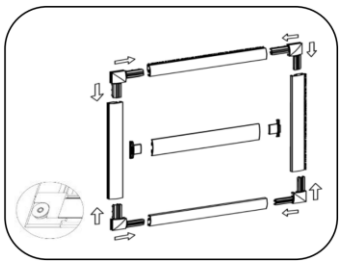


Fit the profiles together with the corner connectors as shown. Once assembled, fit the crossbar, if supplied. Fit the corner connectors with wheels at the bottom.

2

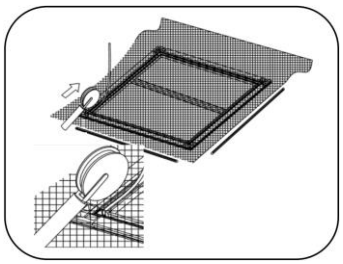


Lay the mesh over the screen, with its threads aligned with the profiles. Using your fingers or a spline roller, press the spline into two adjoining sides at 90°, keeping the mesh straight without tensioning it. Fit the remaining two sides, pulling the mesh to tension it.

3

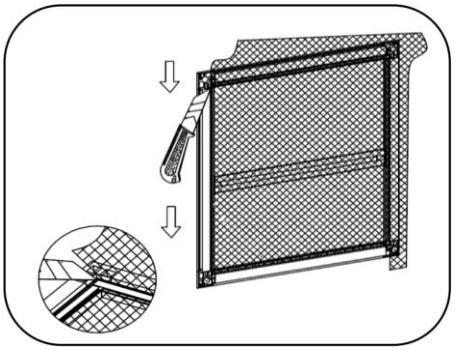


Use a utility knife to trim the excess mesh along the cutting groove provided in the profile.

4

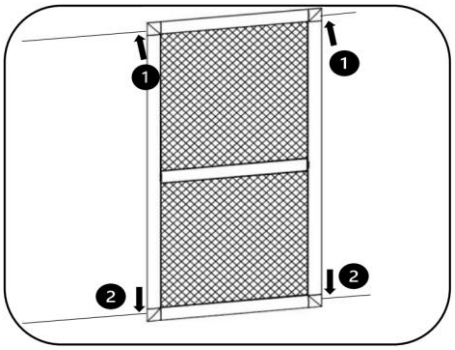

Fit the assembled screen into the guides: insert the top first, then lower it onto the bottom guide.

5

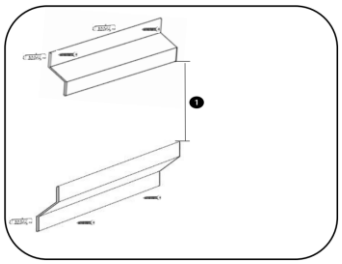

INSTALLATION WITH ADDITIONAL Z GUIDES: First screw the Z guides to the top and bottom of the opening. The distance between the guides must equal the height specified for manufacturing the screen. Once the guides are fitted, return to step 4 to install the screen.



Assembly overview