
Hinged insect screen door

ELITE DOOR


ASSEMBLY AND INSTALLATION INSTRUCTIONS

1

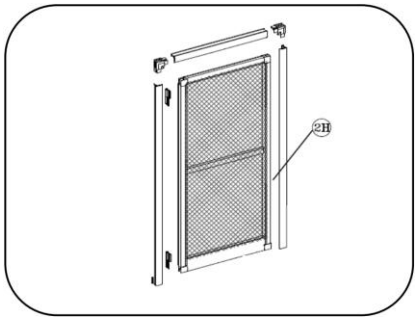


Lay out all parts on a table or on the floor, noting the UPSIDE labels that indicate the top of the door. Some corner connectors are pre-assembled to prevent incorrect positioning.

2

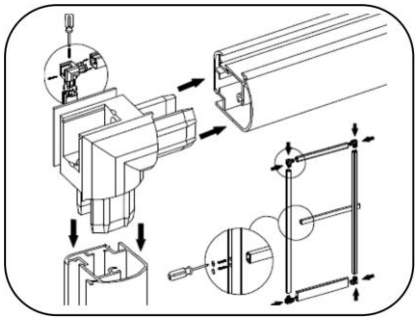


Fit and screw together all corner connectors. IMPORTANT: Take particular care when positioning the crossbar with the knob, as this determines whether the door opens to the right or left.

3

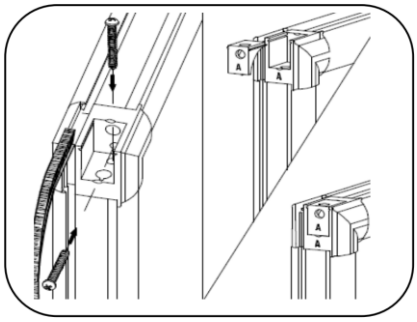


Once the structure is assembled, fit the brush seal into the bottom kick-plate profile and fit the corner connector covers.

4

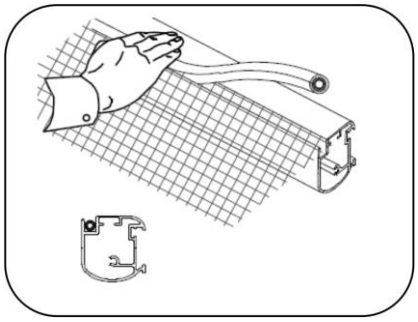


Lay the mesh over the assembled leaf. Secure it by pressing the rubber spline into the channel around the profile. Once fitted, carefully trim off the excess mesh with a utility knife.

5

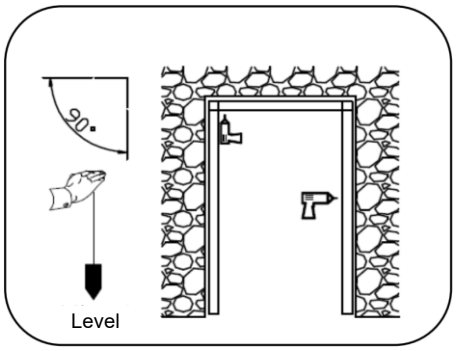

Screw the frame to the wall, making sure it is square.

6

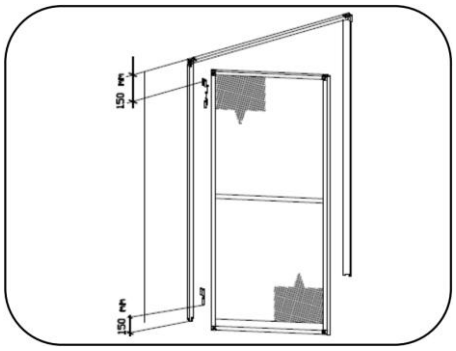

Screw the hinges to the frame approximately 15 cm from the top and bottom, using a 2.5 mm Allen key. Position the leaf and screw it to the brackets fitted to the frame.