
Side-opening retractable insect screen

LUXE LATERAL 2 LEAVES

ASSEMBLY INSTRUCTIONS

EXPLODED VIEW AND COMPONENTS

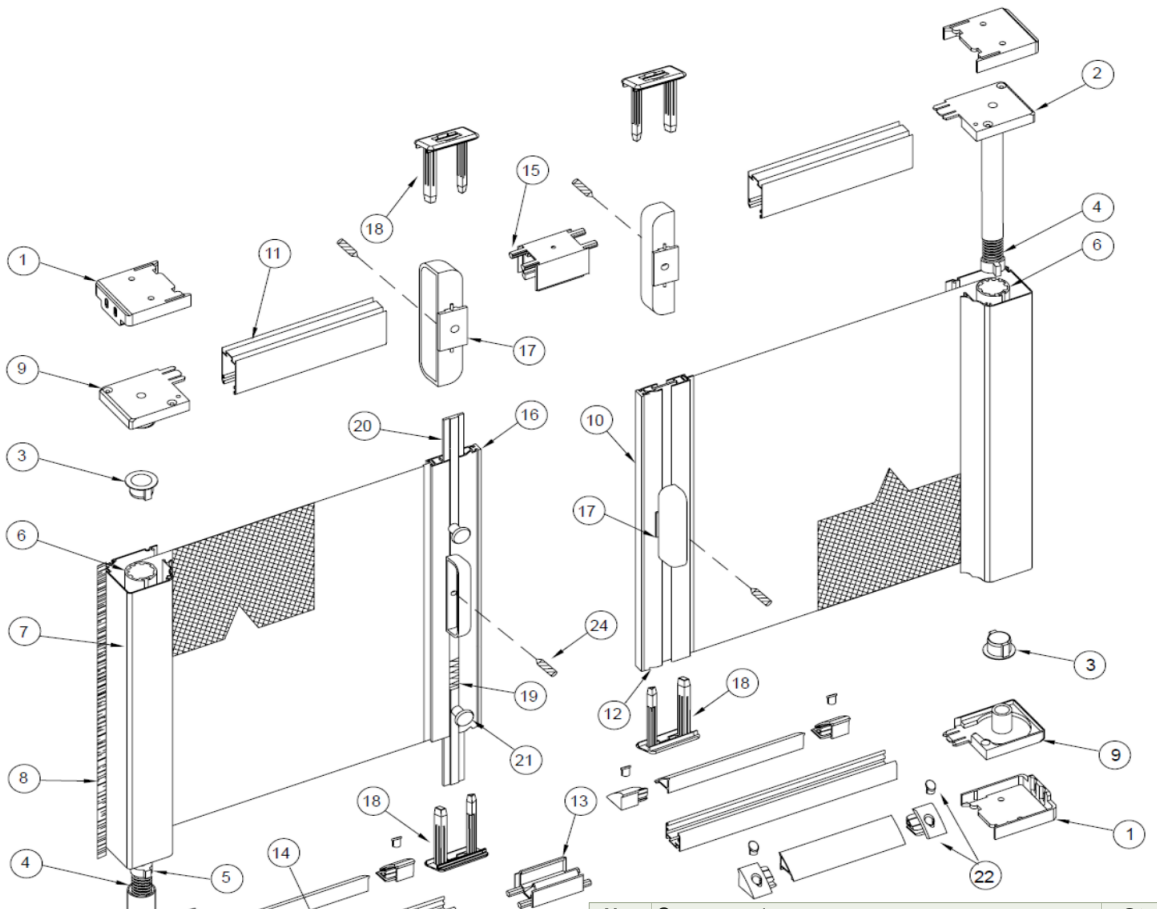



No.	Component	Qty.
1	Screen mounting bracket	4
2	Long screen end cap	1
3	Screen bearing	2
4	Long spring 46	1
5	Screen spring end fitting	1
6	Vertical screen shaft	1
7	F-31 cassette	1
8	Cassette brush seal 5x9	1
9	Short screen end cap	1
10	4-pole magnetic strip	1
11	Standard guide profile	2
12	F-32 handle profile	1
13	Bottom side connector	1
14	Bottom guide profile	2
15	Standard side connector	1
16	4-pole magnetic strip	1
17	Recessed handle	4
18	Side roller handle end cap	4
19	Side spring	2
20	2-leaf screen operating rod	2
21	2-leaf side pin	2

Side-opening retractable insect screen

LUXE LATERAL 2 LEAVES

ASSEMBLY INSTRUCTIONS

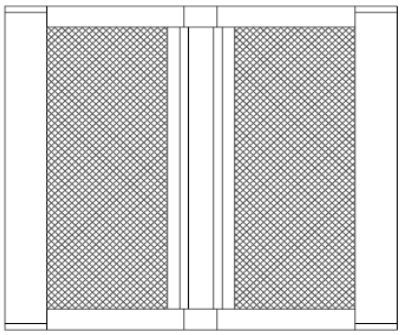

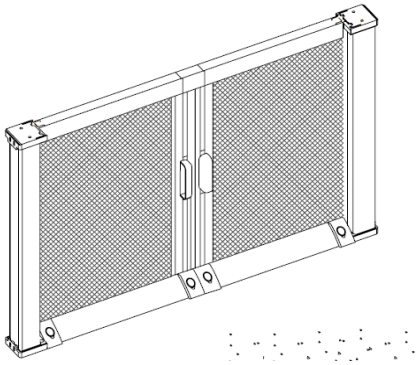

1. Screw the 4 mounting brackets (1) into place: two on the ceiling and two on the floor.
2. Snap the cassettes (7) into the mounting brackets (1). IMPORTANT: The cassettes are not handed and can be fitted on either side. One cassette has the closing mechanism with the operating rod and pin (19 and 21) (PASSIVE LEAF); the other closes with a magnetic strip (ACTIVE LEAF). Fit the ACTIVE LEAF on the side used most often for access, keeping the PASSIVE LEAF closing mechanism on the inside of the house.
3. Join the two sections of the bottom guide (14) with the bottom guide connector (13). Fit the assembly onto the tabs projecting from the right or left end cap (2 or 9), then fit the opposite end by gently flexing the guide connector (13). Screw the guides to the floor.
4. Join the two sections of the top guide (11) with the top guide connector (15). Fit the assembly onto the tabs projecting from the right or left end cap (2 or 9), then fit the opposite end by gently flexing the guide connector (13). Screw the guides to the ceiling.
5. If BOTTOM RAMPS have been selected, place them on each side of the bottom guide and screw them to the floor using the fittings supplied for this purpose. Fit the covers to conceal the screws.

INSTALLATION SECTION DETAILS:

